






Thule Rapid System Kit 1081

> Instructions

MITSUBISHI Carisma, 4-dr Sedan, 97-04

MITSUBISHI Carisma, 5-dr Hatchback, 96-04


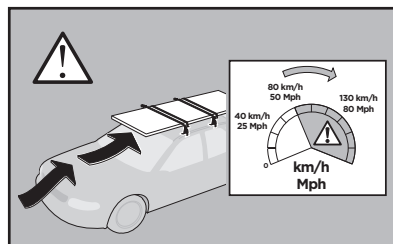
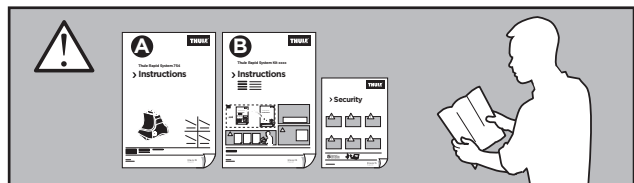
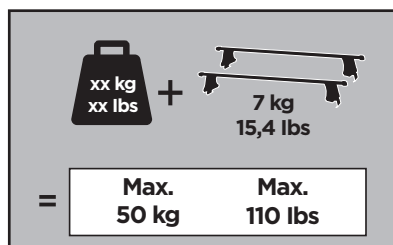


ISO 11154-E

141081



C.20130619
519-1081-01

Bring your life
thule.com

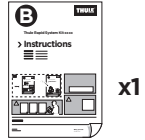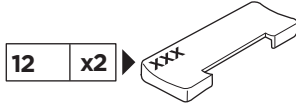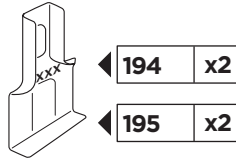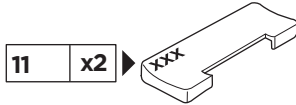



1

	X (scale)	X (mm)	X (inch)
MITSUBISHI Carisma , 4-dr Sedan, 97-04	30,5	956	37 ⁵ / ₈
MITSUBISHI Carisma , 5-dr Hatchback, 96-04	30,5	956	37 ⁵ / ₈

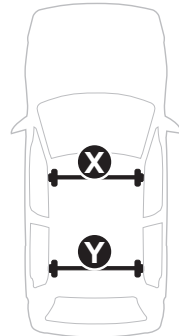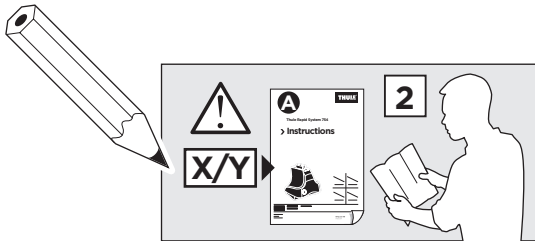


	Y (scale)	Y (mm)	Y (inch)
MITSUBISHI Carisma , 4-dr Sedan, 97-04	24,5	896	35 ¹ / ₄
MITSUBISHI Carisma , 5-dr Hatchback, 96-04	26,5	916	36 ¹ / ₈


2

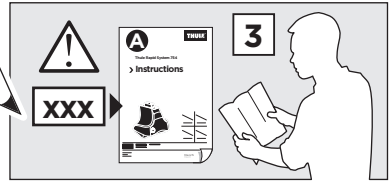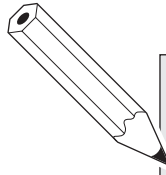


MITSUBISHI Carisma, 4-dr Sedan, 97-04

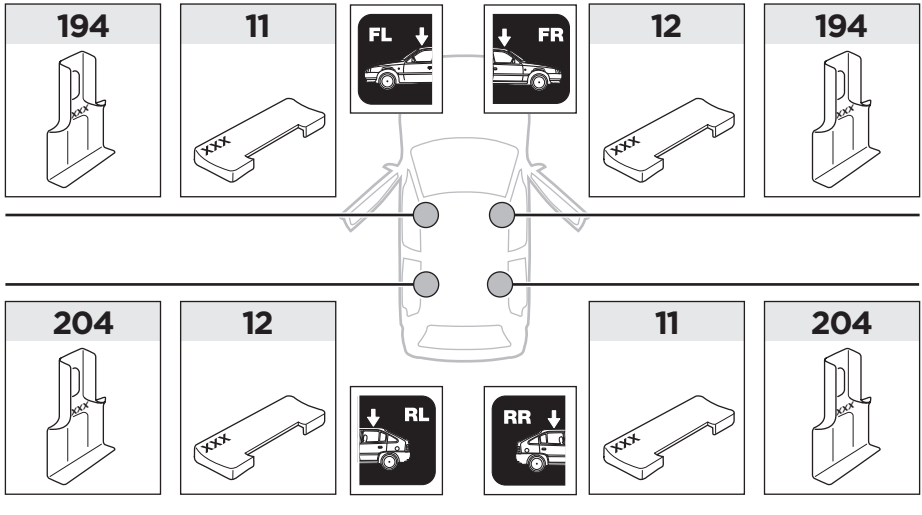


MITSUBISHI Carisma, 5-dr Hatchback, 96-04

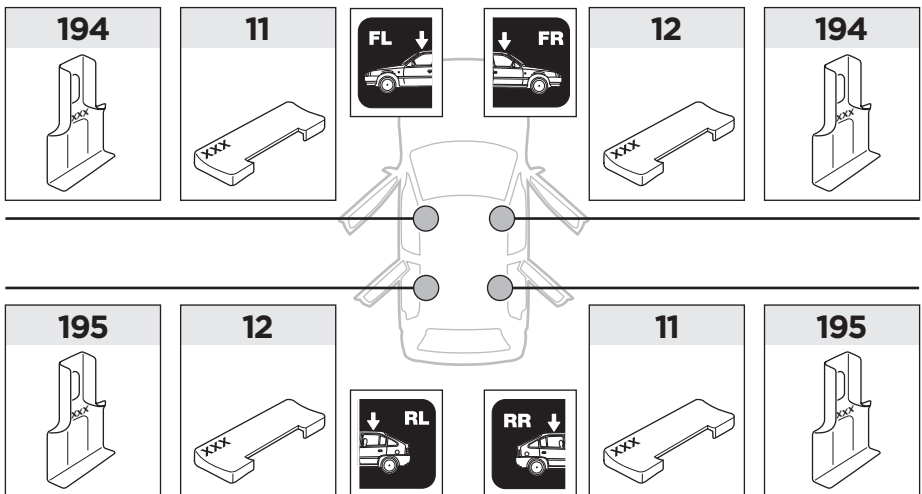


3

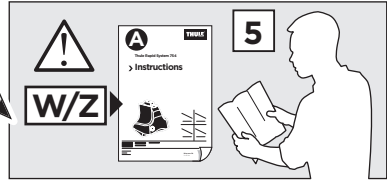

	W (mm)	Z (mm)	W (inch)	Z (inch)
MITSUBISHI Carisma , 4-dr Sedan, 97-04	220	650	8 5/8	25 5/8
MITSUBISHI Carisma , 5-dr Hatchback, 96-04	220	650	8 5/8	25 5/8

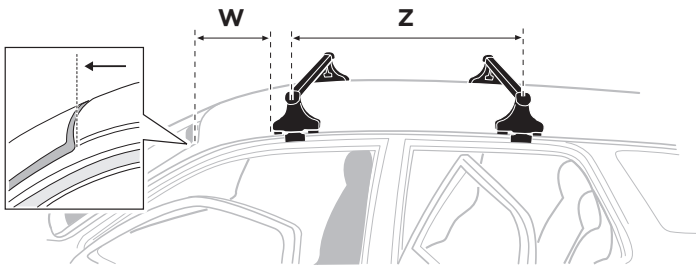

MITSUBISHI Carisma, 4-dr Sedan, 97-04

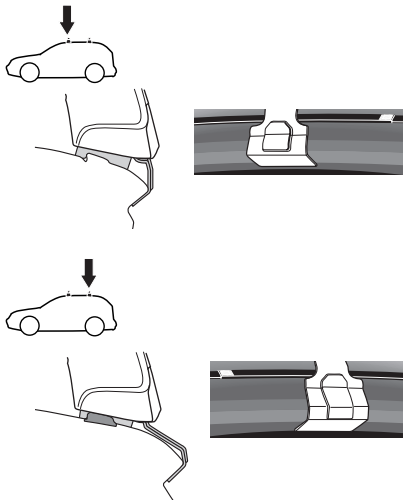

MITSUBISHI Carisma, 5-dr Hatchback, 96-04

