






## Thule XT Kit 3140

# > Instructions

FORD Transit Courier, 4-dr Van, 14-

This kit is only for vehicles with fixpoint mounting.

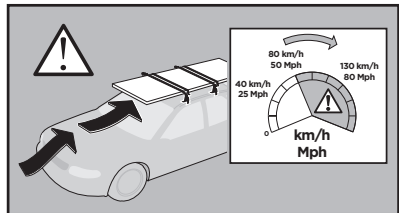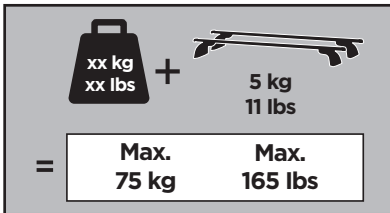
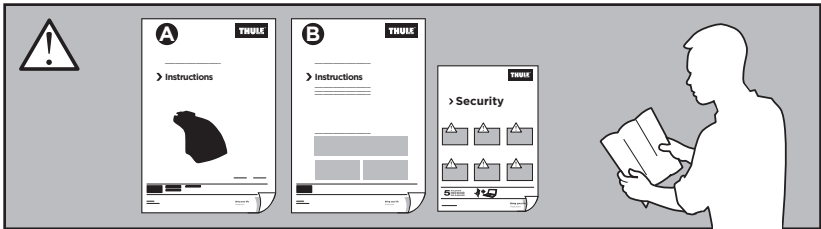


ISO 11154-E


183140

C.20170612  
509-3140-02




Bring your life  
thule.com

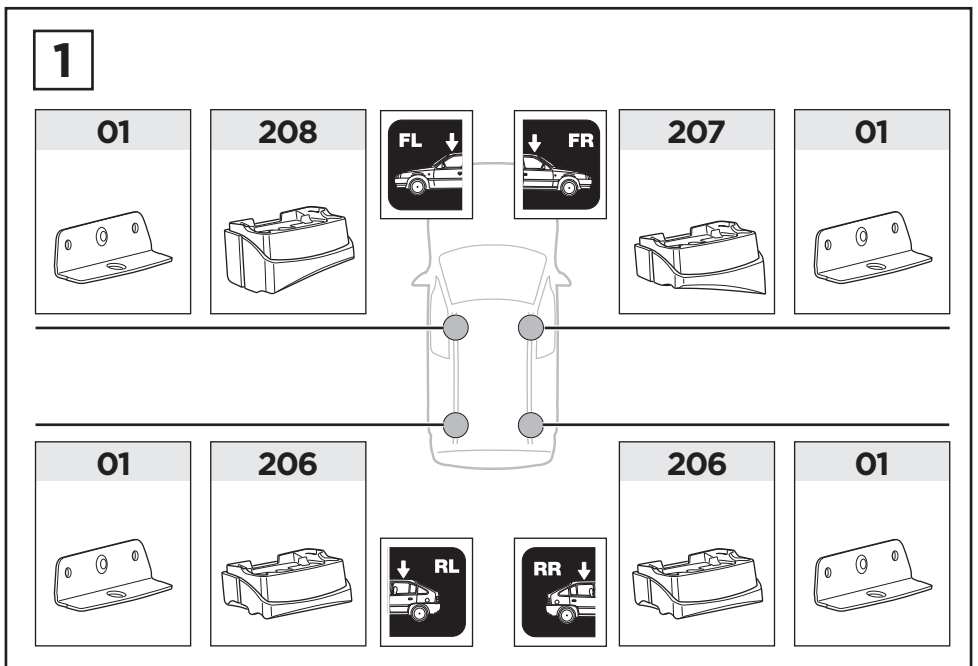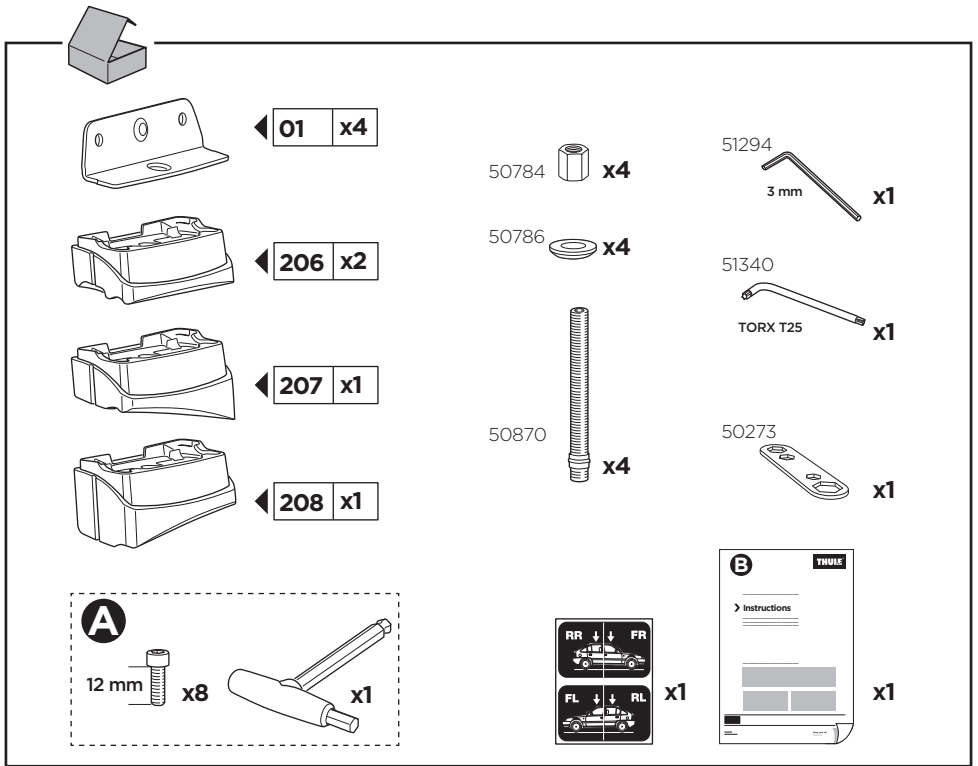


2

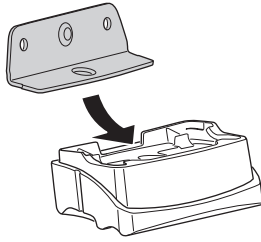


C

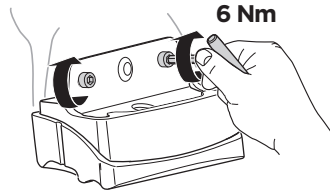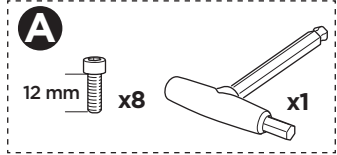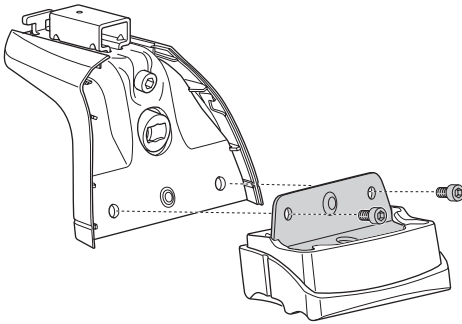


3




x1

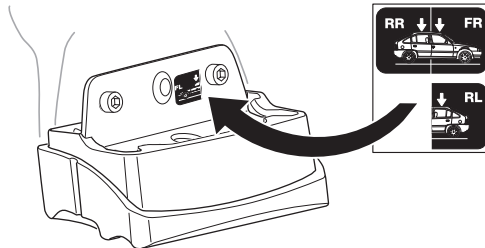


4




A

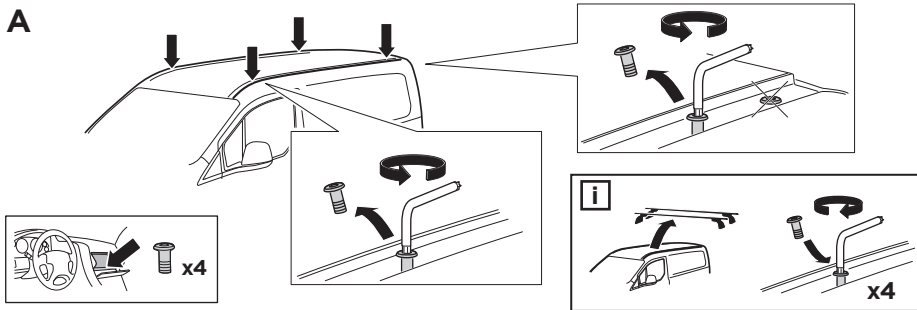


B

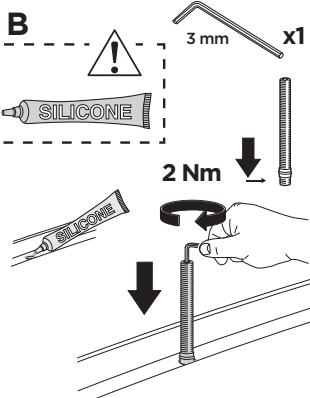

C

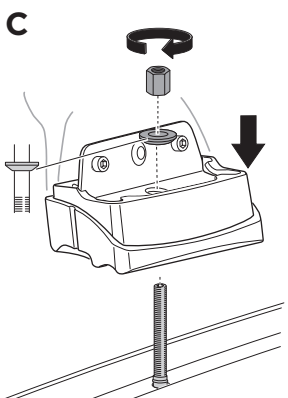

D

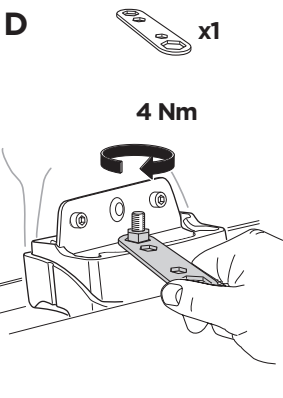

5

